



**IMBERA USA, LLC.**  
245 Town Park Drive, Suite 145  
Kennesaw, GA 30144  
1.678.504.6835

**Technical Support**  
1.866.548.5770 ext. 3, 4, or 5  
Direct lines:  
West Coast – 1.559.299.1083 or 1.559.326.9177  
Central USA & Canada – 1.817.760.6120  
East Coast – 1.678.293.8305 or 1.267.254.6904

**Parts & Service**  
PartsPO@imberacooling.com  
1.678.273.3892  
1.866.548.5770 ext. 2

**Technical Documentation**  
<http://www.imberacooling.com/warranties/files>

[www.imberacooling.com](http://www.imberacooling.com)

# USER MANUAL

HC



## Use and care manual for HC refrigerant gas coolers

Included lines:  
VR / VRS / VRD / VRP / G3 / EVC / HR / EHC  
CCV / CCH / SVC / SVS / VL / VLS / VF / HFS  
EHF / VLH / VLQ / BHS / IVC

Carefully read this manual before  
using cooler



## CONTENT

IMPORTANT SAFETY INFORMATION .....	3
Safety precautions .....	3
COOLER SERIAL NUMBER .....	5
Locating the labels .....	5
INSTALLATION .....	6
Accessory installation .....	7
Electrical connection .....	11
HOW TO USE THE COOLER .....	12
Turning on the cooler .....	12
Storing product inside cooler .....	12
Temperature control .....	14
Lighting .....	17
Hinged door .....	18
Self-closing system for hinged door .....	18
Sliding door .....	19
Self-closing system for sliding doors .....	19
GENERAL MAINTENANCE .....	20
General cleaning .....	20
Condenser cleaning .....	20
Evaporator deicing .....	21
Technical maintenance .....	21
COOLER'S FINAL DISPOSITION .....	21
TROUBLESHOOTING GUIDE .....	22
TECHNICAL SUPPORT .....	25
WARRANTY POLICY .....	26

## NOTES

## NOTES

## IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING

### **WARNING!**

Use this cooler only for the purpose that it was made for as described in this manual.

Proper installation, care and maintenance are essential for perfect operation and maximum energy efficiency.

In the event you find a problem not described in this manual, do not attempt to solve it by yourself; call Imbera's Technical Support Services for assistance.

*IMPORTANT: we strongly recommend you ask for assistance from our Technical Support Services or from our qualified technicians for any failure, problem or malfunction of this cooler.*

### **SAFETY PRECAUTIONS**

- Before using, this cooler must be installed and placed following the instructions contained in this manual. Save these instructions for future reference.
- Do not allow individuals to climb, stand on or hang from the outer portion of the cooler, on the shelves or inside the cabinet. This may cause the cooler to tip over and damage the device or cause serious injuries or death.
- Do not touch the inner surfaces of the cooler when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Do not store or use solvents, flammable vapors or liquids in the vicinity of this or other electrical devices.
- Unplug the cooler before cleaning or performing any kind of repair.
- Wipe up any spills inside the cabinet immediately.
- If the cooler is equipped with power switches, turn the cooler on and off through these buttons. If the cooler does not have them, shut down directly from the plug, but never pull the cable to do so. For any maintenance you must disconnect it.
- Children must be supervised to make sure they do not play with the cooler.
- This cooler is not designed to be used by people with physical or intellectual disabilities, children or people with no experience and knowledge of use, unless they are supervised by an adult who has properly read and understood this manual and looks out for their safety.
- Do not use or operate this device if its use has been excessive, misused, altered or modified from manufacturer's original specifications.
- Be extremely careful when closing doors, keeping fingers out of the clearances between the doors and cabinet, to prevent injury.
- This cooler contains a charge of refrigerant at a pressure determined by the type of refrigerant used and the internal volume. The installation and welding of the piping should be treated by a service technician authorized by Imbera who is properly trained in the use and management of refrigerants.
- Never stack two or more coolers; leveling feet are not designed for this purpose, and doing so compromises use safety. Stacking of one cooler, only, on top of the same model is approved if using pods, skids or pallets, and supported by the cabinet corners only.
- Refrigeration system on this cooler must not be damaged or manipulated by untrained personnel.

**AVOID RISKS:** if power cord or other electronic components are damaged, only the manufacturer or an authorized technician may repair it to avoid danger.

## NOTES



**PRECAUTION:** do not store explosive substances, such as spray cans with flammable propellant, inside cooler.



**PRECAUTION:** this cooler uses highly flammable HC refrigerant. Do not perforate cooling system tubing. This may cause fire or explosion.



**WARNING:** do not obstruct cooler venting grills, it is important to maintain adequate air flow.



**WARNING:** do not use mechanical devices or other means to speed up deicing process, other than those recommended by the manufacturer.



**WARNING:** do not damage cooling circuit.



**WARNING:** do not use electrical equipment inside cooler's storage compartment except for types recommended by the manufacturer.



**WARNING:** in order to reduce flammability danger, cooler installation must be performed by qualified personnel only.



**DANGER:** fire or explosion risk. This cooler uses highly flammable HC refrigerant. Any cooler repairs must be performed by qualified personnel.

**IMPORTANT:** Imbera reserves the right to perform product improvements. Design and specifications are subject to change without notice.

## WARRANTY POLICY

**THREE-YEAR PARTS & LABOR WARRANTY:** Imbera warrants to the original purchaser of every new Imbera refrigerated unit, the cabinet and all parts thereof, to be free of defects in material or workmanship, under normal, proper use and maintenance service as specified by Imbera and upon proper installation and start-up in accordance with the instruction packet supplied with each Imbera unit. Imbera's obligation under this warranty is limited to a period of three (3) years from the original installation or 39 months after shipment date from Imbera, whichever occurs first.

The parts covered under this warranty that are determined by Imbera to have been defective within three (3) years from original installation date are limited to repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include standard straight time labor charges only and reasonable travel time, as determined by Imbera. This warranty does not cover standard wear and tear on parts nor issues caused by improper installation or lack of basic preventative maintenance. Furthermore, Imbera is not responsible for any cost associated with the relocation of the cabinet for repairs.

**ADDITIONAL TWO-YEAR COMPRESSOR WARRANTY:** In addition to the three (3) years warranty stated above, Imbera warrants its compressors, including R134a, R600, and R290 compressors, with a two (2) year added coverage on parts (not labor) for a total of five (5) year coverage from the original purchase date. Compressor warranty will be voided if careful handling procedures have not been followed; for technical questions call Imbera technical service department at 1866 548 5770. Compressors determined by Imbera to have been defective within this warranty period will, at Imbera's option, be either repaired or replaced with a compressor or compressor parts of similar design and capacity. Imbera assumes no liability for misuse or inadequate maintenance of the unit.

**OTHER LIMITED LIABILITY WARRANTIES:** For misaligned and/or fallen doors, warranty coverage is for up to 12 months. Warranty against rust is also 12 months, to be awarded only if unit performance is affected. Broken glass, front/back grills, and power cords are not covered by this warranty, unless DOA (dead on arrival). Additional limited warranties are awarded to: gas leaks and refrigerant (6 months), clogged system (6 months), mechanical and electrical false contacts (6 months), relays and capacitors for compressor (6 months), magnetic gasket (2 years).

**WARRANTY CLAIMS:** Claims for labor or parts must be made directly through Imbera. All claims should include: unit model number, cabinet serial number, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. In case of compressor warranty, the compressor model tag must be returned to Imbera along with above listed information. LED driver or fan motor warranty replacements must be supported by manufacturer's tag or equivalent information. Any claim against these warranty provisions must be commenced within 90 days after the cause of action has occurred. All replaced, faulty, damaged parts must be returned for inspection and warranty validation either through an Imbera service agent, or directly if customer is authorized for Imbera repair.


**SHIPPING GUARANTEE:** Imbera warrants to the original owner of any Imbera unit that every unit shall arrive in good condition. Any damage should be noted and reported within seven (7) days of delivery. Such damage may include: dented and/or scratched cabinet, broken glass doors, stickers torn or scratched, refrigerator is not cooling effectively. Damages caused by customer, due to improper handling and installation, are excluded from this shipping guarantee.

**WHAT IS NOT COVERED BY THIS WARRANTY:** Imbera's obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty. NO CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, LOSSES OR DAMAGES ARISING FROM PRODUCT SPOilage CLAIMS WHETHER OR NOT ON ACCOUNT OF REFRIGERATION FAILURE. IMBERA ASSUMES NO LIABILITY FOR PARTS OR LABOR COVERAGE FOR COMPONENT FAILURE OR OTHER DAMAGES RESULTING FROM IMPROPER USAGE OR INSTALLATION OR FAILURE TO CLEAN AND/OR MAINTAIN PRODUCT AS SET FORTH IN THE WARRANTY PACKET PROVIDED WITH THE UNIT. WARRANTY IS NOT TRANSFERABLE. IMBERA IS NOT RESPONSIBLE FOR ANY COST ASSOCIATED WITH THE RELOCATION OF CABINET FOR REPAIRS. ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD ARE NOT COVERED BY THIS WARRANTY. IMPROPER ELECTRICAL CONNECTIONS, FAILED OR DAMAGED COMPONENTS ARE NOT COVERED BY THIS WARRANTY. Additional items that will render this warranty void: equipment not used according to the specifications described in the operational manual or used in environments exceeding manufacturer performance and design specifications, equipment exposed to direct sunlight or heat sources or weather conditions that cause failures, oxidation that is caused by a hit, grooves, friction with metal parts exposed to the rain or wind, corrosive elements out of normal use, including lack of frequent cleaning; fan blades that are damaged, unbalanced or broken by external objects, rodents, garbage, etc. Using sharp objects, solvents, detergents, abrasive cleaners or steel wool for defrosting purposes that can damage equipment; allowing the electrical input voltage to be higher or lower than normal conditions and variants; equipment altered or repaired by a third party other than Imbera's service agents or without Imbera's authorization.


## COOLER SERIAL NUMBER

### Locating the labels

In order to give you the best service, it is necessary to locate the serial number as described below:

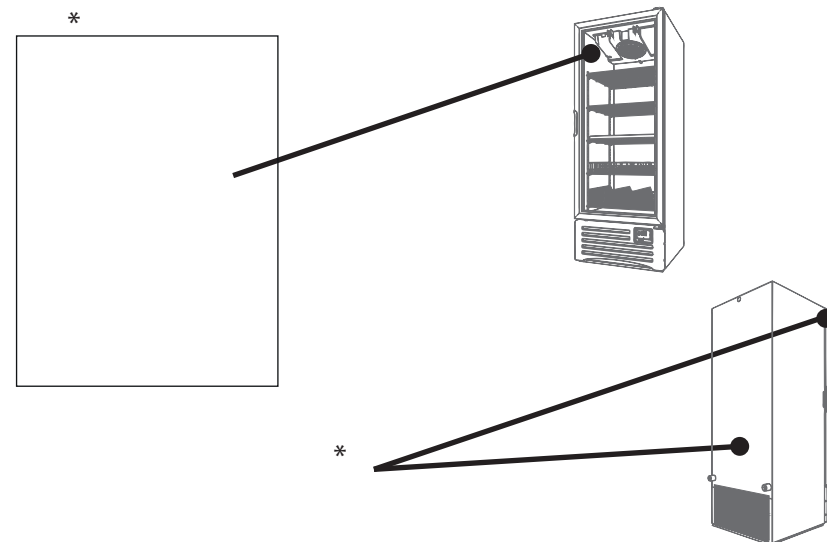

\*Images for reference use only.

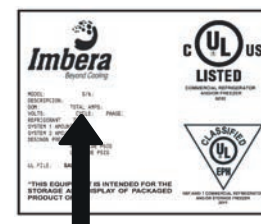


Serial number sticker placed in the back of the freezer

How to read a serial number


524	08	05	01489
↓	↓	↓	
Cooler model	Manufacturing year	Manufacturing month	Consecutive number

## INSTALLATION

- Install this cooler avoiding direct sunlight.
- Do not install this cooler outdoors.
- This cooler must not be used or stored where ambient temperature is under 14°F or greater than 140°F and where relative humidity is greater than 90%.
- Never install equipment close to heat sources; otherwise, cooler may consume more energy or function incorrectly.
- Do not introduce hot objects or warmer than ambient temperature inside cooler.
- Never obstruct or place objects along front grill which may obstruct free air flow; this may cause inefficient cooler operation and will increase the energy consumption.

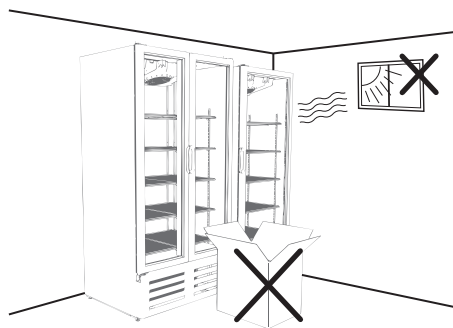

- Never place objects over the cooler. Consider that the cabinet's structure has been constructed mainly of laminated sheet metal and polyethylene foam that may easily bend or deform when hit, and it may even deform over time due to placement of TV, microwave oven and other objects.
- For adequate cooling, cooler separation on back and sides must be at a minimum distance of 10cm (4") with respect to walls or other nearby objects

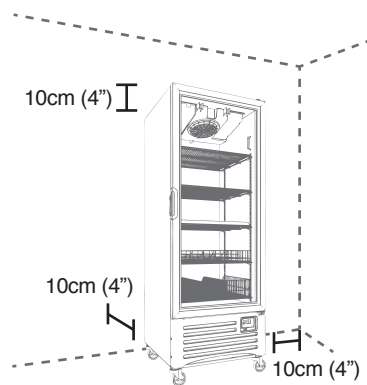

## PROCEDURE TO REQUEST SERVICE

Equipment service requests should be made as follows:

Contact Imbera's technical support department at 1.678.504.6845

When requesting a service call, it is mandatory that the customer provides the following information:

- Company Name - Owner
- Full Address (City, state, zip code) - site
- Telephone and Contact Name – at site & of owner
- Serial #

## TRAINING

Imbera offers training programs for customer technicians, where we update and deliver tips on how to work on our equipment.

## IMPORTANT NOTES

Imbera has no responsibility for accidents or damage suffered as a result of inadequate wiring, overloads and lack of ground wire, misuse of equipment, lack of training, etc.

This warranty does not cover expenses incurred for freight, transportation, shipping, etc. generated by sending the refrigerator or part thereof for repair and return to the client.

## INTERPRETATION

If there is any ambiguity regarding the interpretation of this document, please contact Imbera directly to speak with a customer service provider: 1.678.504.6835

**\*\*This warranty policy is subject to changes without notification.**

**IMPORTANT:** do not to use a cutter knife or blade for cooler handling. Inappropriate use may scratch or cut off components.

Failure description	Possible causes	Check	Corrective actions
Cooler inside temperature is too high or does not cool product	More than three hours have not passed since cooler was connected		Wait for a minimum of 14 hours until cooler recovers its temperature
	Condenser coil is dirty		Clean dust, lint and waste from coil
	Evaporator coil blocked by frost or frozen	Door closure and seals are firm and adequate throughout perimeter	Turn cooler off to defrost coil
	Doors remain open for a long time or doors do not close	Doors closed when not used	Do not allow doors to remain open for prolonged periods of time
	Hot product load in cabinet is excessive		Allow enough time to cool product
	Poor or obstructed air flow		Arrange product to allow adequate air flow. Ensure load does not exceed max fill height label
Temperature inside cooler is too low and freezes product	Product is located too close to evaporator	Product is not near fan inlet	Place product at least 2 inches away

## ACCESSORY INSTALLATION


Before turning the cooler on or connecting to power supply, make sure you use the installation kit, such as wall separators, level supports or other accessories.

Depending on your cooler's model, you may have some of the following accessories:

### Accessories




leveling skid




leveling screw

Used to provide support and adequate inclination for door closure.



wheel

Some models have optional wheels for easy mobility inside the establishment. If this is the case, wheels are factory-installed, and it is only necessary to remove transport pods.

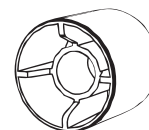

wall separator

This accessory is designed to provide adequate separation between cooler back and wall.

### Tool to be used



safety shoes



gloves



safety goggles




Phillips or flat screwdriver




pliers


## Leveling skid / leveling screw

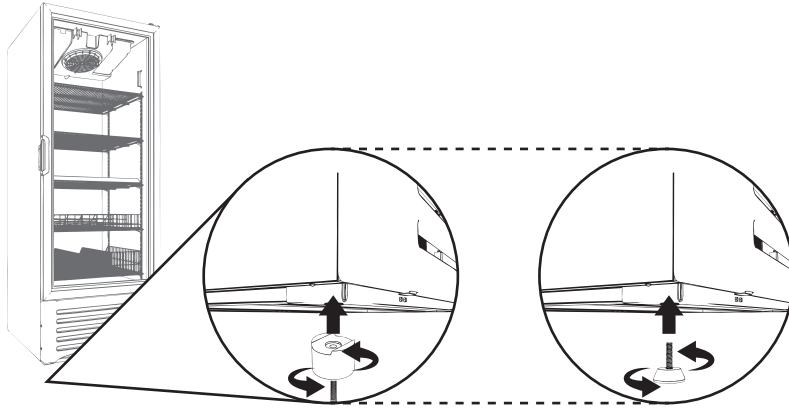

## Wheel

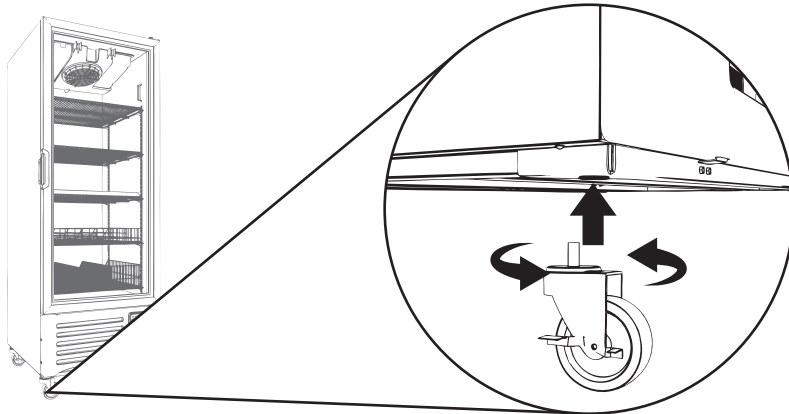

## Wall separator

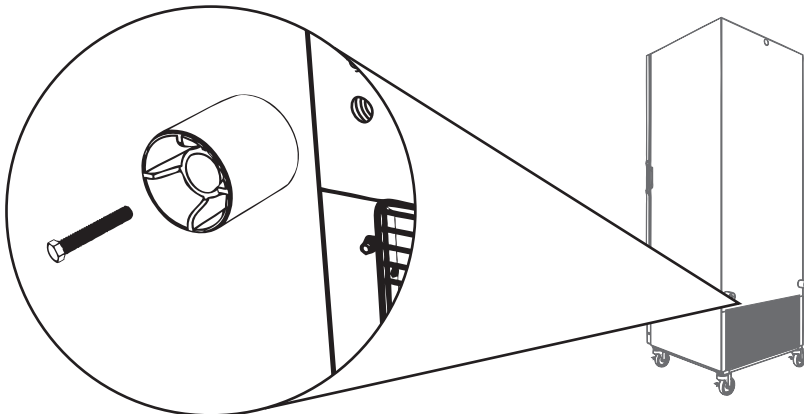

Failure description	Possible causes	Check	Corrective actions
Equipment works continuously for long periods of time	Condenser coil is dirty		Clean coil to remove dust, lint and waste
	Evaporator coil blocked by frost or frozen	Door closure and seals are firm and adequate throughout perimeter	Turn cooler off to defrost coil. Do not to use a cutter knife or blade for handling. Inappropriate use may scratch or cut off components
	Doors remain open for a long time or doors don't close	Doors closed when not used	Do not allow doors to remain open for prolonged periods of time
	Door magnetic seals do not close or seal	Seal wear	Adjust door or change seals, if necessary
	Hot product load in cabinet is excessive		Allow enough time to cool product
Compressor does not start, makes buzzing noises or stops due to thermal protector	Voltage variation is excessive or undervoltage is observed	If business lamps vary their intensity	Allow for voltage restore and voltage increase
	Vent motor is protected or burnt. Fan blade is damaged	Fan rotation without variations and for complete blade	Call Customer Service Center if required
	Condenser coil is dirty		Clean dust, lint and waste from coil
	Insufficient air flow or blocked		Remove objects that may obstruct air flow or move to provide enough space around it



## TROUBLESHOOTING GUIDE

Failure description	Possible causes	Check	Corrective actions
Cooler cannot be turned on	Power supply failure	Electric power in the business	Wait until electricity service is restored
	Cooler is not well connected	Outlet must have electrical power	Wait until electricity service is restored
	Loose connection	Plug is well connected	Correctly connect plug to contact
	Just connected and no more than 5 minutes have passed		Wait for at least 5 minutes for compressor to start running.
	Burned fuse or tripped circuit breaker	Physical state of fuse or circuit breaker	Replace fuse or reset circuit breaker
Cooler vibrates and/or makes noises	It is not correctly leveled on a firm and flat surface	Cooler stability	Make sure you place cooler on a firm and flat surface
		No objects are kept under cooler that might cause instability	Remove any carpeting, carton, or other objects from under cooler
	Level supports are unlevelled	Leveling supports are correctly adjusted	Adjust leveling supports until 4 support points are firm
	Loose parts vibrate or against surfaces or walls	Loose components	Locate and tighten loose parts or adjust those that might hit others
	Tubing vibration is transmitted		Separate parts that due to contact may be vibrating together
Lighting turns off	It is set in energy saving mode	It is not necessary to check anything, operation is normal	When door opens, energy savings mode will be deactivated

## Shelves



Floor shelf



Level shelf

These accessories must be used to place products inside the cooler. They are designed to optimize cooler's internal space.

Depending on your cooler's model, it may have different types of shelves. These are some types:

### Floor shelves




Type A



Type B



Type C

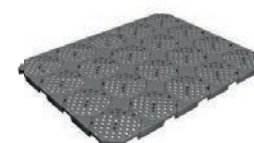

Type D

Observe that these shelves have supports to place them over cooler's floor, as well as enough rods to support product load.

### Level shelves



Type E



Type F




Type G

Shelves must have an adequate orientation and position, never to be forced or exert pressure on the cooler walls or any other accessory.


All shelves must be firmly supported on all four corners with provided accessories:



Metallic clips




plastic supports

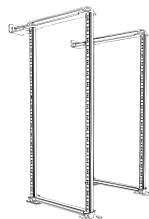

Multilevel frames


Make sure the shelf and the product allow the door to close completely.

**IMPORTANT:** shelves must have an adequate orientation and position, never to be forced or exert pressure on cooler walls or any other accessory.

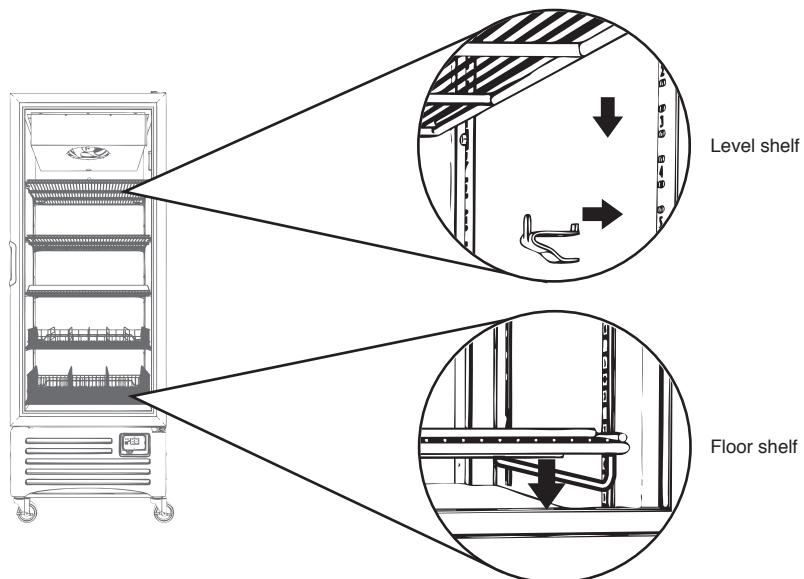


Visislide (optional\*)

The Visislide system allows placing shelves and product in an angle; thus, bottles will always slide to the front.

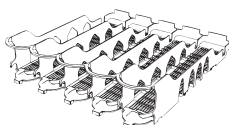

Baskets (optional\*)

Cooler may also have plastic or metal baskets to exhibit product.

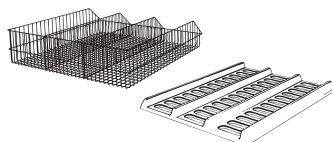

In grease-based locations, such as kitchens and/or food cooking areas, accumulated grease or grime must be cleaned off with water and degreasing agents.

Do not use sharp pointed objects to remove excessive grime, use brush if required.

**IMPORTANT:** do not use solvent or abrasive products for cleaning as they may damage surface finishing.

### Evaporator deicing

Cooler has an automatic evaporator deicing system to guarantee adequate interior air flow.

If you notice that the cooler is forming ice and it does not cool properly, report this issue to the Customer Service Center

### Technical maintenance

If your Imbera cooler requires major maintenance due to refrigeration, electric or lighting system failure, please contact the Customer Service Center.

All repairs must be performed by an authorized technician. Attempts to repair this equipment by inexperienced personnel or yourself may create malfunctions, damage to equipment or to yourself. Such attempts will be considered to automatically void the warranty.

Request and make sure original spare parts are used with the same characteristics to guarantee the cooler's optimal operation.

Before calling the Customer Service Center, check the Troubleshooting Guides included in this manual.

### COOLER'S FINAL DISPOSITION

This cooler's packaging is manufactured with materials that may be recycled. When disposing of packaging, separate materials to be recycled.

This cooler uses refrigerant gas that does not damage the ozone layer and it has a low greenhouse effect. These gases are flammable.

This cooler contains cyclopentane foam as isolating agent, components that contain oil and electrical/electronic components. Do not discard cooler together with household waste; find a collection center approved by local legislation.

Before discarding cooler:

- Cut off power cord.
- Remove door(s).
- Leave shelves in a place far from reach of children.

## GENERAL MAINTENANCE

**IMPORTANT:** disconnect the cooler from wall outlet before you perform any maintenance or cleaning task.

**IMPORTANT:** do not perform any cleaning task with water hose or jet wash as it may cause damage to electrical components and cause electric shock.

It is preferable to perform cleaning and maintenance tasks using safety work gloves.

### General cleaning

Cleaning the cooler regularly prevents deterioration and reduces malfunctioning that may alter product preservation. Clean with a piece of cloth only, warm water and neutral soap. Dry surfaces using a soft cloth or rag.

Avoid cleaning surfaces with water hose or jet wash.

Do not use solvent or abrasive products for cleaning tasks as they may damage surface finish.

Do not use sharp points to remove excessive dirt; use brush if required.



Use a broom or mop to clean area under cooler. Avoid splattering water directly under cooler's internal front area.

### Condenser cleaning


Condenser must be cleaned once per month or when required to prevent dirt from reducing cooling system efficiency.

To clean condenser, it is necessary to remove the cooler's front grill.

Remove dust, lint and trash with soft bristle brush or broom.

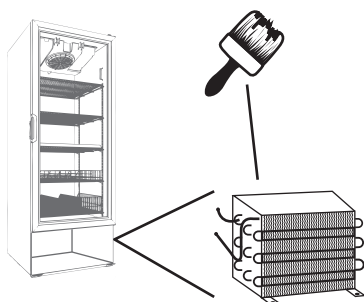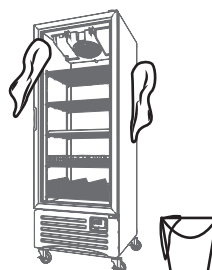

## ELECTRICAL CONNECTION

⚠ WARNING	
	
<b>Electric shock risk</b>	
<ul style="list-style-type: none"> <li>-Connect to a three-pin outlet</li> <li>-Do not remove outlet ground pin</li> <li>-Do not use power adapters</li> <li>-Do not use extension cords</li> <li>-If failure occurs when following these instructions, it may cause fire or electric shock</li> </ul>	

Imbera coolers with HC refrigerants (R290 / R600) are designed to operate under a specific electric voltage. Check cooler's serial label to make sure that the electrical classification is adequate for installation (see page 5).

**IMPORTANT:** ground connection is a protection system for equipment connected to electrical network. It is used in electrical installations to avoid current pass-through to user due to an isolation failure of active conductors.

This cooler must be connected to physical ground. In case a short circuit occurs, ground connection reduces the risk of electrical shock.

- Cooler is equipped with a power cord with a ground cable with a physical ground connection plug. Plug must be connected to an adequately-installed outlet and ground connected; if you don't have this type of plug, it is your responsibility and obligation to have it installed.


- Please contact a certified electrician or a certified technician if you have questions about ground connections.

- Never use extension cords, as that action will void the warranty.

- Under no circumstances cut off or remove the third ground connection pin from power cord. Do not use an adapter; if this recommendation is not followed, it may cause burns or death to user due to electrical shock.

- For optimal operation, it is recommended to have this equipment connected to a dedicated circuit outlet that is for cooler use only.

- Connect plug firmly to electrical outlet making sure it is inserted all the way in.

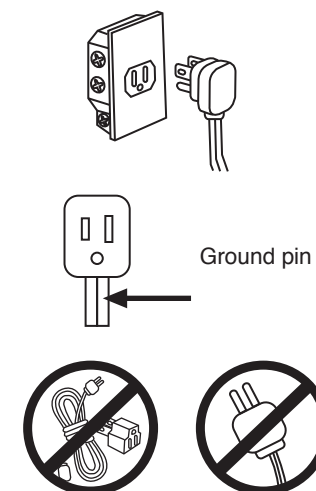

## Power cord

Cooler is equipped with a polarized power cord, with ground connection. Do not attempt to eliminate ground connection or use two-terminal adapters.

**AVOID RISKS:** if the power cord or other electronic components are damaged, only the manufacturer or authorized technician may repair them to avoid danger.

## HOW TO USE THIS COOLER

### Turning on the cooler





After having transported and installed the cooler, let it stand for at least twelve hours to allow compressor oil to fully settle.

Once the installing instructions have been followed, connect the cooler per electrical specifications indicated on serial number label (placed inside cabinet).

For your own safety, avoid touching the device with wet hands or damp or feet. You should not handle cooler when barefooted.

### Storing product inside cooler

- If a floor shelf is included (Type A, B, C, D), place it directly inside cooler, and right after that, place shelves (Type E, F, G), using metallic clips (make sure they are aligned at the same height). If a floor shelf is not included use clips to place a shelf (see pages 9 and 10).
- If the cooler has a plastic rack included, it includes supports for each grill, without using metal clip.
- If the cooler has been turned off and it is necessary to turn it on, wait for at least one hour to cool the interior of the cooler before introducing product.
- When the cooler is filled up, arrange and order product inside; do not throw or drop product when placing it inside as that action will damage.

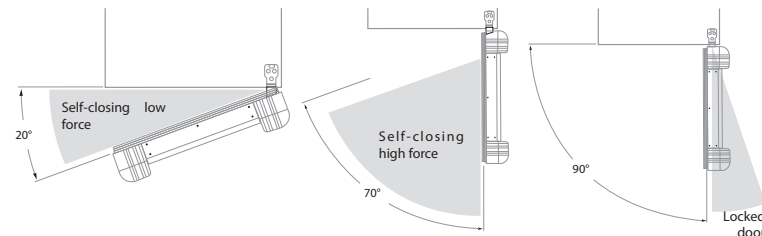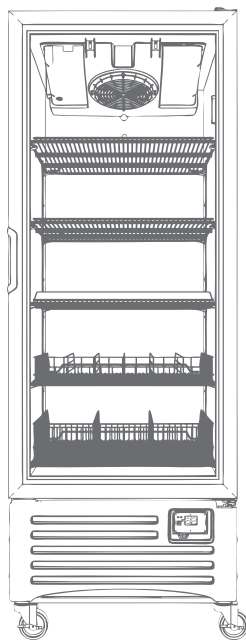


### Sliding door

Just as with hinged doors, sliding doors are designed to provide optimal thermal isolation of refrigerated products, making product display more efficient at the point of sale. If the sliding door is damaged, do not attempt repairing it yourself. Call our Technical Support Service.

Sliding doors are supported by a set of rails, allowing door opening with minimal force, providing access to product.

With a moistened cloth, clean glass solid door internal and external surfaces at least once per week.


At least once per month, clean sliding door rails and check for perfect conditions for adequate door slide.

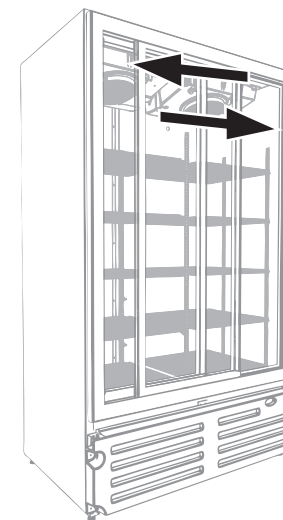


### Self-closing system for sliding doors

The cooler may be equipped with an integrated self-closing sliding door system inside the frame, which prevents doors from remaining open carelessly, forcing them to close by an internal spring part of its mechanism. If you notice that it lacks sufficient force to fully close or it closes with too much force, such that it could damage the door or refrigerated product may be at risk, call the Customer Service Center.

To open doors, just slide from left to right on the opposite side where they are located.

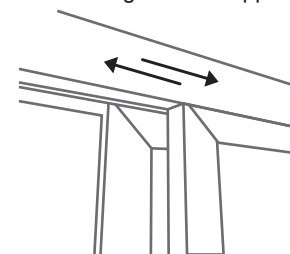

To refill cooler, open left door and turn right door lock. Thus, you may keep doors open temporarily, while you fill the cooler with product to be refrigerated.

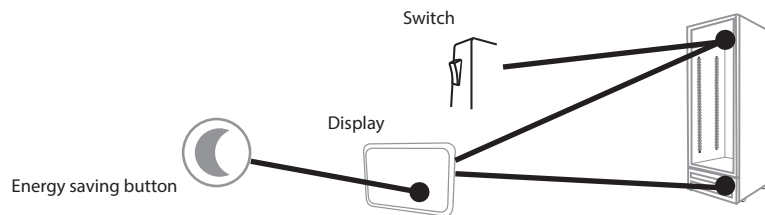

### Hinged door

Cooler's door is designed to thermally isolate the refrigerated product from the environment. If it gets fractured or broken, do not attempt to repair it; call the Customer Service Center.

With a moistened cloth, clean glass solid and glass door internal and external surfaces at least once per week.

At least every three months, clean the door's seal, check it for perfect condition, and check whether it makes contact with frame inside cabinet.

Door hinges and supports have been designed for an adequate turning radius and a proper seal separation distance. If for any reason you need to replace or adjust, request support from the Imbera Tech Support Department at 1.678.504.6835.

If the cooler includes reversible doors and requires a change at the opening, allow this task to be performed by a knowledgeable authorized technician with regard to the self-closing system and electrical installation.

Keep fingers out of risk areas such as door frame and hinges, always use the handle. Pay special attention when closing doors especially when children are nearby.

Door opening must be free from objects or obstacles as they might fall down or slide down causing injuries or wounds to users.

### Self-closing system for hinged doors

Door may be equipped with a self-closing system that keeps door from being left open carelessly, forcing it to close by an internal spring part of its mechanism. If you notice that it lacks sufficient force to fully close or it closes with too much force such that damage the door or refrigerated product may be at risk, call the Imbera Tech Support Department at 1.678.504.6835.

The cooler may include a self-closing system with lock, with two user modes:

1. Automatic closure: thanks to an internal spring in the mechanism, the system closes the door automatically when it is positioned from 20° to 90° in aperture.
2. Reloading: if aperture is greater than 90°, the door lock will be activated and door will remain open at 90°. Thus, you can conveniently reload cooler. To release lock, you simply push the door again from 90° to 75° to return to mode 1.

Airflow inside cabinet is priority for the cooler, thus make sure that:

- Product does not exert pressure on internal walls and it does not go beyond perimeter or grill limits.
- Avoid introducing containers inside closed boxes, such as carton board, trays, bags or plastic covers.
- If your cooler has a bin and fan avoid placing product and other objects against, or in a way that obstructs, fan air outlets



**IMPORTANT:** some models are designed to cool products (i.e. beer), under 0°C. Do not use this type of cooler for other products that may be quality-affected due to these low temperatures. Some products freeze when subjected to these temperatures and the containers may explode. If product containers are made of glass, they may cause cuts and serious wounds to you; thus, always follow recommendations and instructions from your supplier. Do not introduce unauthorized containers or product or, ask the Service Center for further details.

It is recommended that before closing your business, fill up your cooler so that on the next day you have cold product available for your customers; doing so will contribute to energy saving due to the fact that doors will be kept closed overnight and cooling will be more efficient.

**IMPORTANT:** horizontal shelf maximum load must not exceed equivalent weight of three can trays of 355ml (12oz).

### Category table for Imbera line coolers

Line	Product	Temperature
VR, VRS, VRD, VRP,G3, EVC, EHC, HR, IVC	Soda, water, juice	32°F to 44.6°F
CCV, CCH, SVS, SVC	Beer	26.6°F to 37.4°F
VL, VLS, VLQ, VLH, BHS	Dairy, delicatessen	35.6°F to 42.8°F
VRA	Soda, water, juice, dairy	32°F to 50°F
VF, HF, EHF	Frozen	-13°F to 3.2°F

### Design climate condition

Condition	Temperature	Relative Humidity
A	77°F	60%
B	75°F	45%
C	90°F	65%
D	105°F	75%



## Temperature control

All Imbera temperature controls are electronic and are previously configured by manufacturer. Thanks to this technology, neither height nor exterior temperature affect the interior environment, thus, no adjustments are necessary

Your cooler may include one of these controls:

- CIF: Intelligent Control Function
- ETC1H: Electronic Controller

The temperature control display is usually located on the plastic front grill.

In the case of ETC1H control, it is located on the condenser unit. It is protected by the front plastic grill. In smaller coolers, ETC1H is located on the back of cooler. It does not have a display.


If your cooler has a Intelligent Control Function (CIF), follow the instructions attached to cooler for further detail.

Each CIF has its own cooling configuration. It may also include energy savings modes and it may transmit information to your suppliers. Energy savings modes may be activated with the display button or automatically when the cooler is not in use.

In case of coolers without door, although some versions have CIF, they don't include the savings mode due to lack of a door; however, you must use the night curtain just before closing your business to reduce energy consumption and to allow compressors to rest.

If the cooler includes an EMS controller, it will also be preconfigured. It analyzes temperatures inside and outside the cooler for better cooling of product. Temperatures and alarms are shown on integrated display.

The ERC controller is preconfigured and allows the user to set the right temperature for the product. It includes inner temperature sensor and also has sensors for the refrigeration and lighting system that allow a better performance.

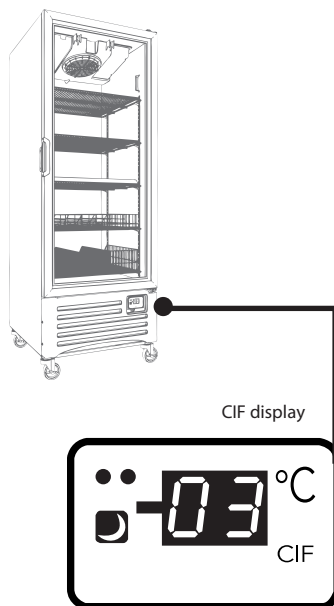

## Lighting





Consider that this cooler has been designed with the intention to exhibit products to encourage your and your supplier's sales. For best results, lighting must be turned on during sale hours.

Our LED lighting technology allows an improved electric efficiency, reducing and providing more operation years with regard to lighting. LED lighting is located around the door perimeter, on the internal cabinet upper portion, or around the perimeter of the internal cabinet.

Your cooler may include a switch that allows you to turn off lighting manually. Use it only when your business is closed. During sale schedule, this lighting technology represents a minimum percentage of the cooler's total energy consumption.

If the cooler includes a Intelligent Control Function (CIF), lighting will be tuned off automatically in savings mode. You don't have to worry about this, each control will turn lighting off according to cooler characteristics and the products contained in it. Just open the door to exit savings mode.

**IMPORTANT:** if you notice any lighting malfunction, please contact the Customer Service Center.

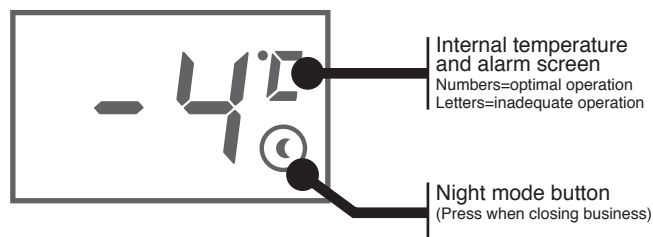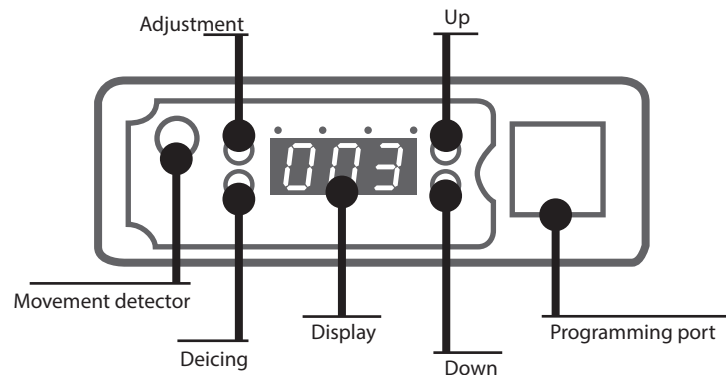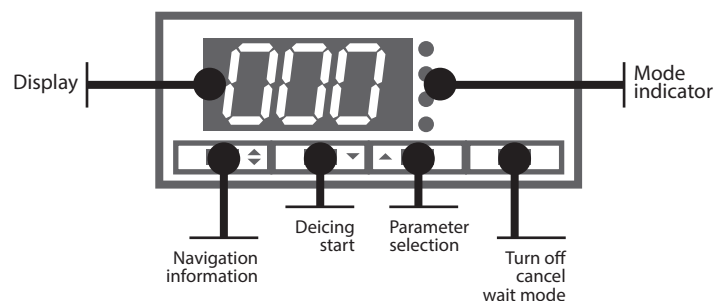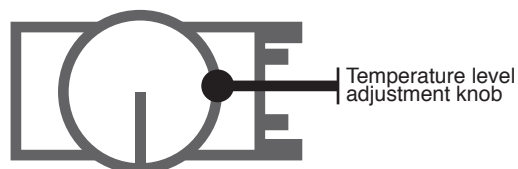*CIF EVO display***EMS****LAE****ETC1H**

The LAE control is preconfigured, allowing user to select an adequate temperature for different products. Alarms are shown on the display. It also includes an automatic deicing mode, manual deicing, and lighting control.


**IMPORTANT:** if the cooler has a temperature control issue or, if failure alarms occur on CIF, EMS, LAE or ERC displays, never attempt to make control adjustments; please call the Customer Service Center. You will be assisted by experienced and authorized personnel.

The ETC1H control in some models is also preconfigured by the manufacturer to maintain product temperature. It does not include a display that shows temperature or alarms. If you notice malfunctioning, please notify the Customer Service Center.

**CIF**

The Intelligent Control Function is designed by Imbera to satisfy market cooling needs, achieving maximum energy efficiency.

There are many CIF models to provide various solutions for multiple cooling needs for each product.

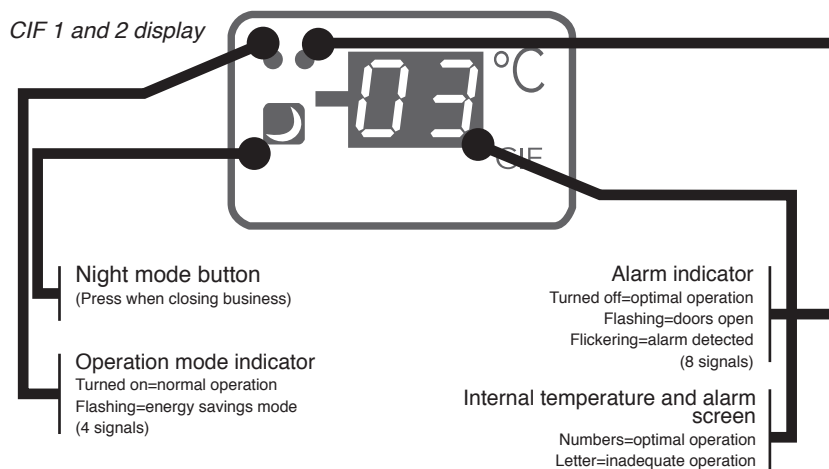*CIF 1 and 2 display**CIF NOVO display*